

Mobi Firmware Updates

- 1.) Plug all your RF sticks (looks like flashdrive) into a USB ports on your computer (if it is not already plugged in)



- 2.) Click the "eInstruction" icon in the lower-right task bar by the time (see 2 options below—depending on computer):

Older Computers with Windows XP




OR


Newer Computers with Windows 7



- 3.) Chose "eInstruction Device Manager" at top of menu

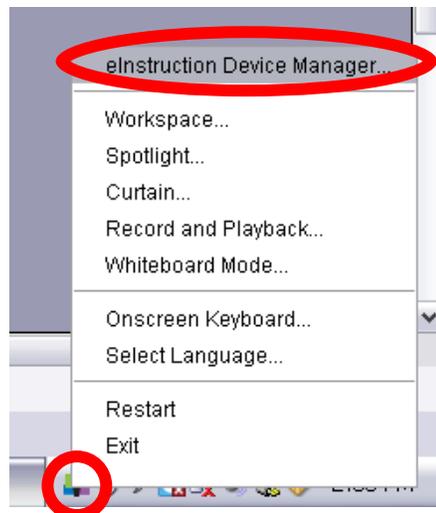

- 4.) Click on a Mobi icon (so that it is highlighted)

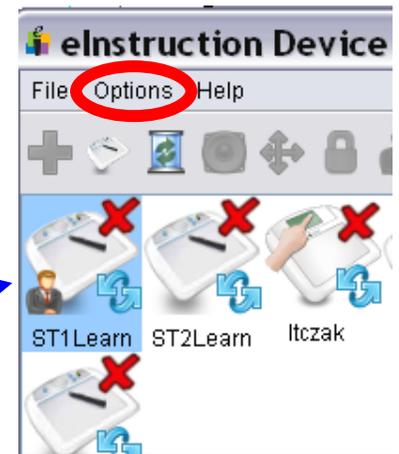

- 5.) Chose "Options" - then "Remove"

- 6.) Repeat steps 4 & 5 to remove all Mobi icons



- 7.) Select "File" then "Preferences"

- 8.) Click the "Firmware Update" tab

- 9.) Click "Check for Update"

Mobi Firmware Updates (page 2)

- 10.) Click to put check in box for all boxes "rfhub" (for RF stick)
- 11.) Click "update" - click "finish" when done



- 12.) Remove RF Sticks


Do following steps for ALL Mobis (same time):

- 13.) Remove charger cords (pictured to left) from AC adapters (plugs into the wall—pictured to right)

If you use a docking station—use the cord that is still in the box



- 14.) Plug - USB ends (A) into computer
- other ends (B) into Mobi
top - near power button

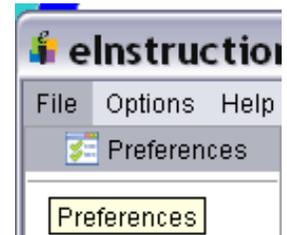

- 15.) Select "File" then "Preferences" again (***leave Mobi icons in display—don't remove***)

- 16.) Click the "Firmware Update" tab

- 17.) Click "Check for Update"



- 18.) Click to put check in box for the names of your Mobis
Named "teacher" or "learner"
if you have not changed names

- 19.) Click "update" - click "finish" when done

- 20.) Unplug end of cord from Mobi

- 21.) After you are done, re-sync your Mobis:

Student Mobis & Older Teacher Mobis:

1. Press blue button on RF stick
2. While RF stick button is blinking, press blue button on back of Mobi

Newer MobiViews (touch screen):

1. Turn Mobi on (should sync automatically)
2. If does not sync automatically, follow prompts on screen